

CommNet

User's Manual

Update 02/02/2009

Index

1.	Introduction.....	3
2.	System Requirements.....	3
3.	Installation.....	4
3.1.	Organization of the installed files	4
4.	Foreword	5
5.	CommNet Config: program configuration.....	6
5.1.	Create the configuration file	6
5.2.	Instruments configuration	8
5.3.	Calls configuration.....	9
5.4.	Instruments groups.....	10
5.5.	Options.....	11
5.5.1.	Configuration for CommNet Display or InfoPanel.....	12
5.5.2.	Configuration for InfoGAP.....	13
5.5.3.	Configuration for Gidas	14
6.	CommNet: activate the data transfer.....	15
6.1.	Manual data request	15
6.2.	Communication devices.....	16
6.3.	Data recording.....	17
6.4.	Communications statistic	17
6.5.	Interpretation of the files generated from CommNet.....	18
6.5.1.	LOG file	18
6.5.2.	ASCII File (TXT).....	18
6.5.3.	Statistics files	21
7.	CommNet Display: show data	22
7.1.	Customizing the visualization.....	24
7.1.1.	Instrument visualization.....	24
7.1.2.	Channel visualization.....	24
7.1.3.	Options.....	26

1. Introduction

CommNet is a program allowing data transfer from one or more LSI LASTEM instruments of the BabucABC to PC in manual/automatic way, also via modem.

In case of manual calls the user starts the communication. In case of automatic calls, the program itself automatically calls the instruments according to the set configurations.

The data so obtained can be saved in an ASCII file (TXT format), apt for being imported immediately to the program *CommNet Display* or other program as *InfoPanel*, or are saved in an Access database compatible with the software *InfoGAP* or in the *Gidas* database of SQL Server 2005.

NOTE

This version of the program has been released to facilitate the use of a mixed net of instruments Babuc ABC and E_Log with memorization of the data in the new database Gidas of SQL Server 2005

2. System Requirements

The program requires the following hardware and software characteristics:

Personal computer

- Operating system: Microsoft Windows 2000/XP/Vista/2003 Server.
- Microsoft .NET Framework V. 2.0 (supplied with the program).
- Physical RAM memory: minimum 128 MB, 256 MB recommended.
- Space available on Hard disk: 100 MB.
- Processor with working frequency 600 MHz or superior, recommended 1 GHz.
- Video card: SVGA res. 1024x768 or superior.

Data loggers

- Babuc ABC V. 3 and following.

3. Installation

First of all check the required system characteristics. For the operative systems Windows 2000 and Windows XP it is necessary to *login* with system administrator rights otherwise the product installation will be incorrect.

Then, install *CommNet starting the Setup* program from the CD CommNet. The installation program will supply the necessary instructions for its completion. It is possible either to install immediately the product and, afterwards, to install the Microsoft .NET framework, or viceversa.

3.1. Organization of the installed files

The installation procedure creates some folders starting from the chosen folder during the installation (default *c:\Program files\LSI-Lastem\CommNet*). They are:

- **Bin**: it contains the executable files *CommNet*, *CommNet Config* and *CommNet Display* and some support files.
- **Doc**: it contains the program documentation (included the user’s manual).

Other folders will be created in *c:\Documents and Settings\All Users\Applications Data\LSI-Lastem\CommNet*; this folder is kept hidden from the operative system; in order to show it go to folder properties and select “Show hidden files and folders”. New folders are:

- **ASCIIData**: it contains the ASCII files where the program stores the data acquired from the instruments.
- **Config**: it contains the program configuration files.
- **Statistics**: it contains the statistic files created by the program.

Next folder will be created in *c:\Documents and Settings\[User Name]\Applications data\LSI-Lastem\CommNet*, where *[User Name]* is the name of the user logged in the Windows system:

- **Log**: it contains the log files created by the program.

Note: in Windows Vista the folder *c:\Documents and Settings\All Users\Application data* is equal to *c:\ProgramData*.

4. Foreword

The program is divided into three separate modules: *CommNet*, *CommNet Config* and *CommNet Display*.

CommNet is the program used for the instrument communication and the data recording; *CommNet Config* is the program used for the configuration of the CommNet; finally *CommNet Display* is the program used to show the instantaneous values acquired by CommNet.

Because *CommNet* work, it is necessary that:

- The licence file for every instrument exist;
- The Babuc instruments have a survey in progress and the survey must be “with memorization”.

5. CommNet Config: program configuration

The working modality of *CommNet* can be set through the program *CommNet Config*; it allows to set:


- The calls to one or more instruments;
- The calls to one or more groups of instruments;
- Paths and format of the data storage.

The program allows to create one or more different configuration files, according to particular communication necessities; only one of them is anyway considered *predefined* and so can be used in a particular moment by *CommNet*. At the suitable moment it is possible to select, as predefined, another one of the files previously set, so the communication modality of the program can be changed very quickly.


5.1. Create the configuration file

After the installation there is no configuration file “ready to use”. It is so necessary to create one. The operations to perform are:

1. Start *CommNet Config* from the menu Start of Windows or directly from the program *CommNet* (choose *Configure* from *File* menu), choose *Configurations...* from *File* menu.
2. Press the key *New* to create a new configuration file. Insert one name and, in case, a comment.

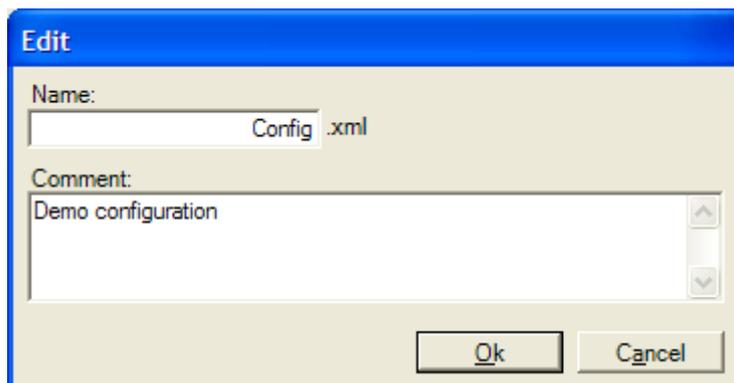


3. Press the key *Ok* to save the changes.

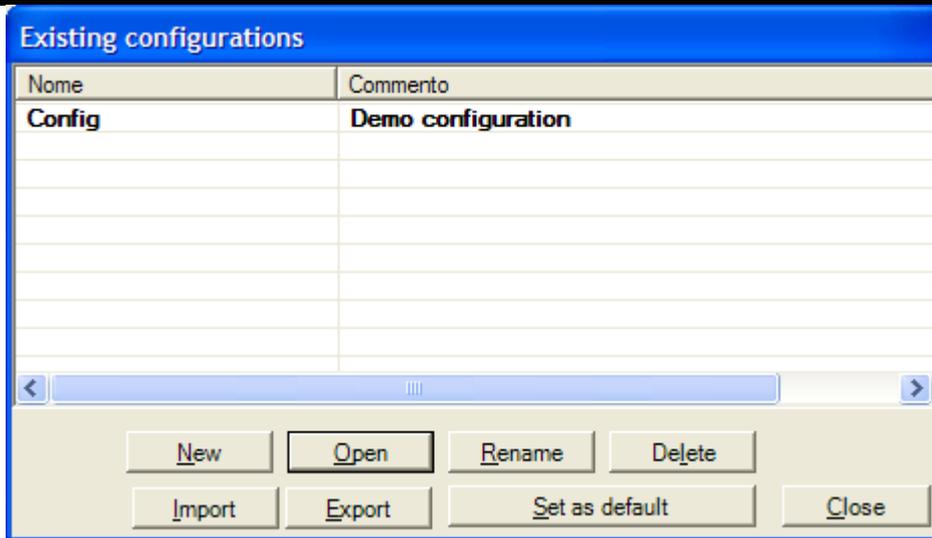

4. Press the key *Set as default* to make possible that *CommNet*, once started, base its working on this configuration.
5. Press the key *Open* to open the configuration.


It is also possible to create other configuration files and, each time, set the predefined one (that is the one that will be used from *CommNet*).

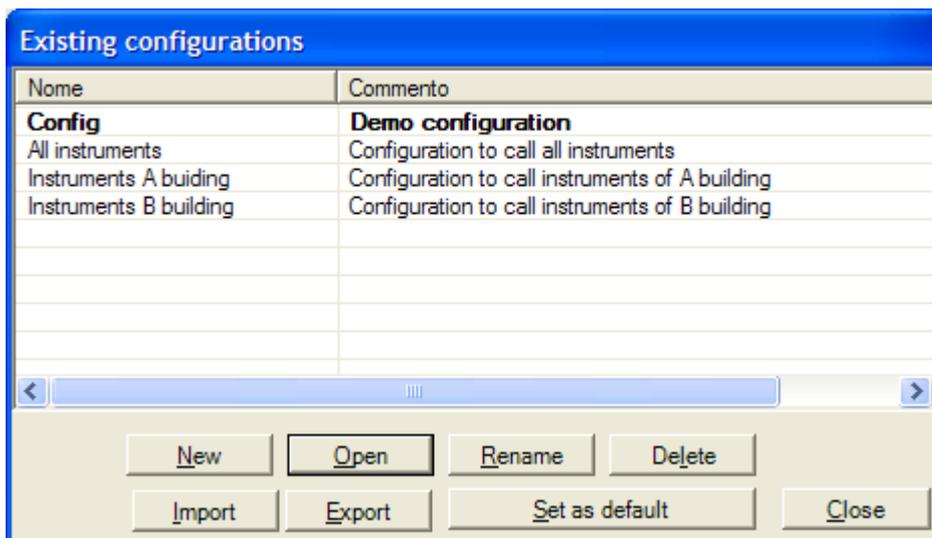

5.2. Instruments configuration

To create a new instrument, perform the following operations:

1. Choose *Add-> Instrument* from the menu *Edit* to add a new instrument.

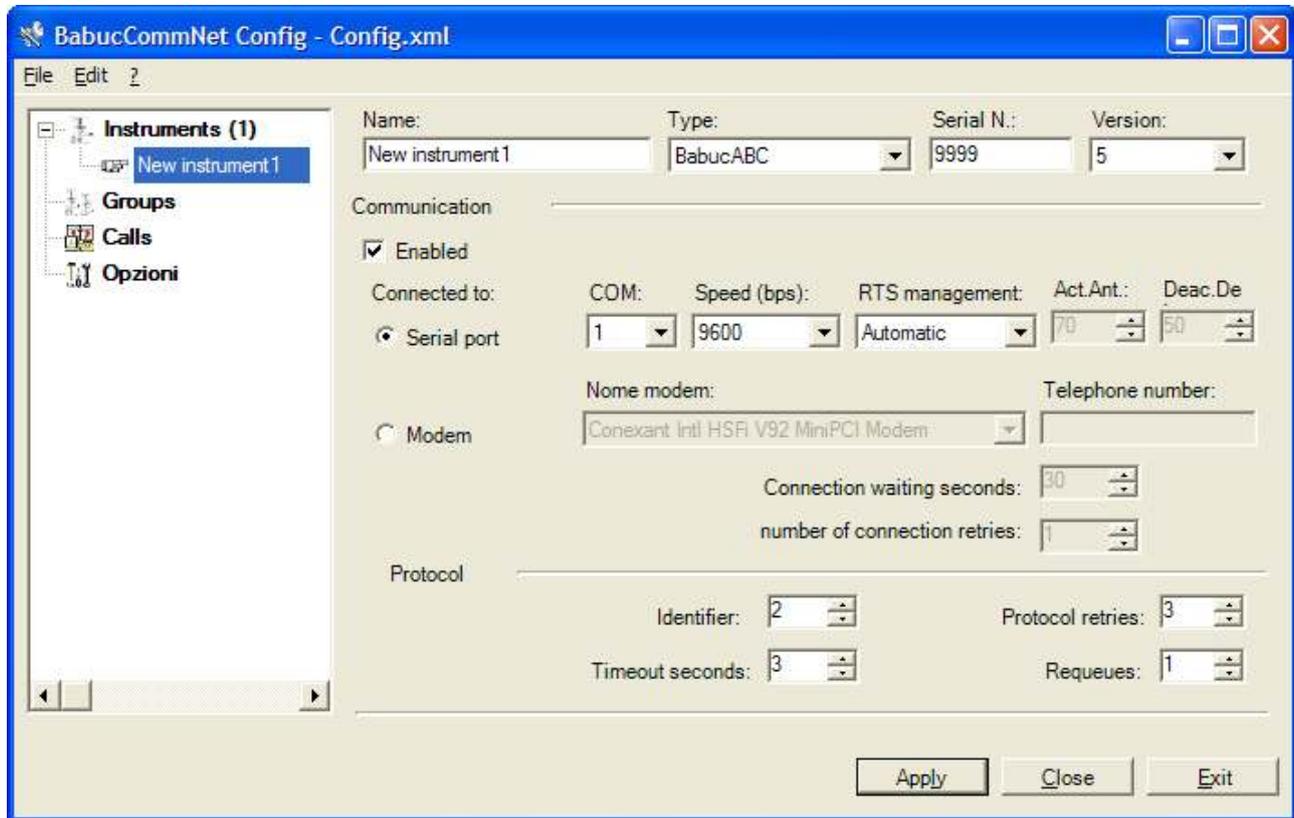

2. Set the instrument parameters (*Type*, *Serial Number*, *Firmware version*). In the current version of the program the only supported instrument is BabucABC; omit the initial zero of the serial number (i.e. digit 120 for the serial number 0120). For more information, refer to the instrument user’s manual.
3. Set the kind of connection. In case the instrument is connected via modem, it is first necessary to set in the system, through the Windows control panel or in another way, the modem that will be used for the connection; on the contrary the connection setting mask will not present any modem configured. If the connection takes place via radio or RS485 or line driver, it is necessary to manage manually the RTS signal setting the parameters *Start activation time* (Act. Ant.) and *End de-activation time* (Deac. De), in milliseconds, as suggested in the instrument user’s manual.
4. Set the *speed transmission* (managed automatically if the connection takes place via modem), and *protocol identifier* (as configured in the instrument). For more information look at the instrument user’s manual.
5. Press *Apply* to save the changes.

This operation has to be repeated in case other instruments have to be configured.

5.3. Calls configuration

The calls planning is strictly connected to the instruments configured and to the necessity of having data available (elaborations and/or instantaneous values).

Suppose, for example, to have three instruments, two of which configured for the connection via modem, and one for the direct connection. Of the first two instruments you desire to have the InfoGAP database daily updated, whereas of the second you desire to have the program InfoPanel updated every minute with the last data acquired.


The solution is to insert two calls, one “daily”, and one “cyclical” (“repeatedly”): the daily call configured to call the instruments connected via modem at a certain time of the day, and the cyclical one to call the one directly connected to the PC with the updating rate of one minute.

The program allows the management of the calls at the level of group of instruments. This can be useful in presence of instruments networks with different kinds of connections, either during the configuration phase and during the calls management.

The instruments of the previous example, configured with the connection via modem, could be grouped in a group called “Instruments with modem”. Consequently in the daily call it will be enough to specify the call to that group.

To create a new call, perform the following operations:

1. Choose *Add>Call* from the menu *Edit* to add a new call. At the beginning the program will propose a “daily” call with the PC time.

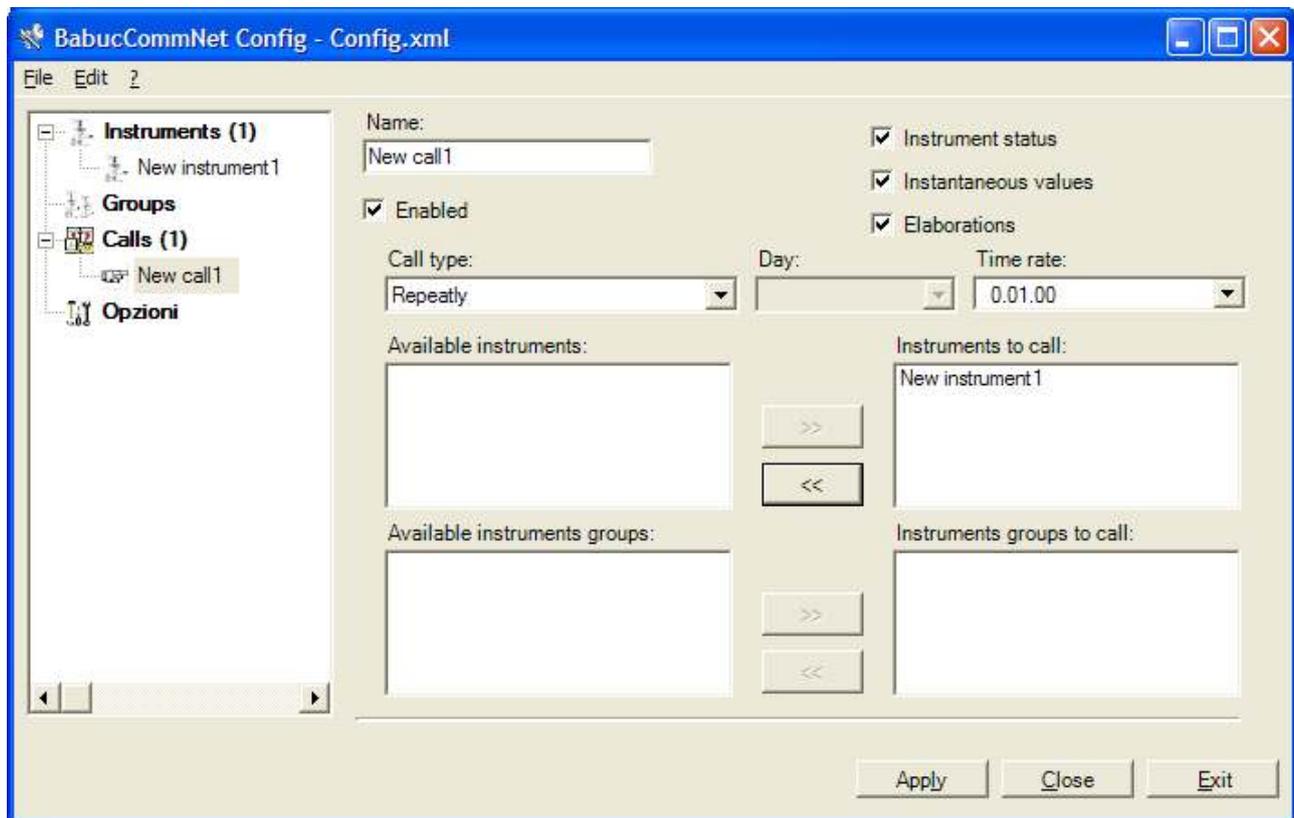


2. Set the name of the call. It is possible to choose a free name.
3. Set the call regularity (*type* and *date-time* or *type* and *time rate*).
4. Set which instrument (or group of instruments) among those previously configured, must be subjected to this logic of call.

5. Enable or not the kind of data to require (*Instantaneous values* in case of use of the program InfoPanel, *Elaborations* in case of use of the program InfoGAP). The *Instrument status* is always request.
6. Press *Apply* to save the changes.

The operation has to be repeated in case there is the necessity to configure other kinds of calls for other instruments connected or that can be called via modem.

5.4. Instruments groups

In case there are more instruments connected and that can be called, it is possible to group these instruments in groups. In this way it is possible to set one group as a single instrument, setting a single call logic. For more information refer to the chapter 5.3.

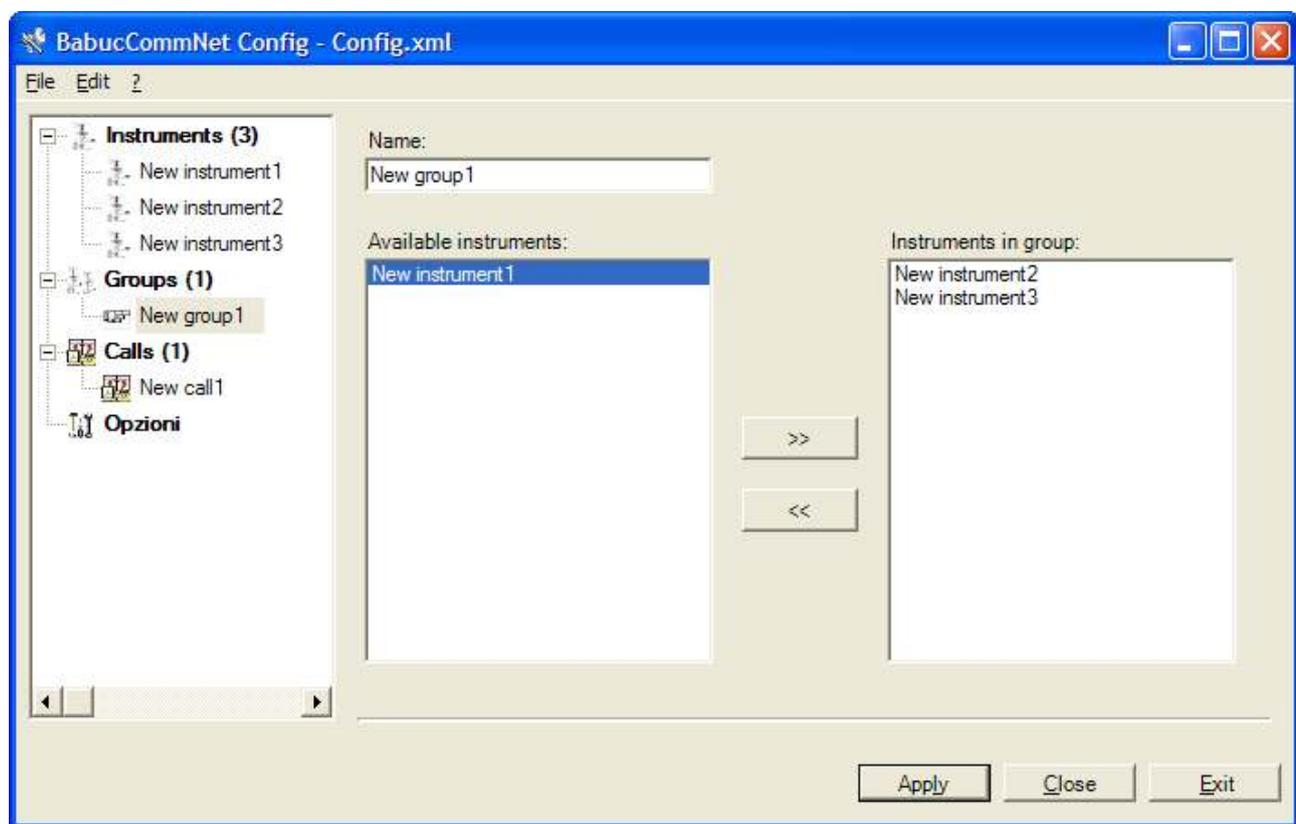


Choose *Add>Group* from the menu *Edit* to add a new group of data loggers. The choice takes place among those previously configured. The name of the group is free.

Press *Apply* to save the changes.

5.5. Options

In the program *Options* it is possible to choose the data storage format together with the relative paths (for the InfoGAP database it is necessary to store also the name of the database InfogenStor.mdb) and the statistic updating rate.

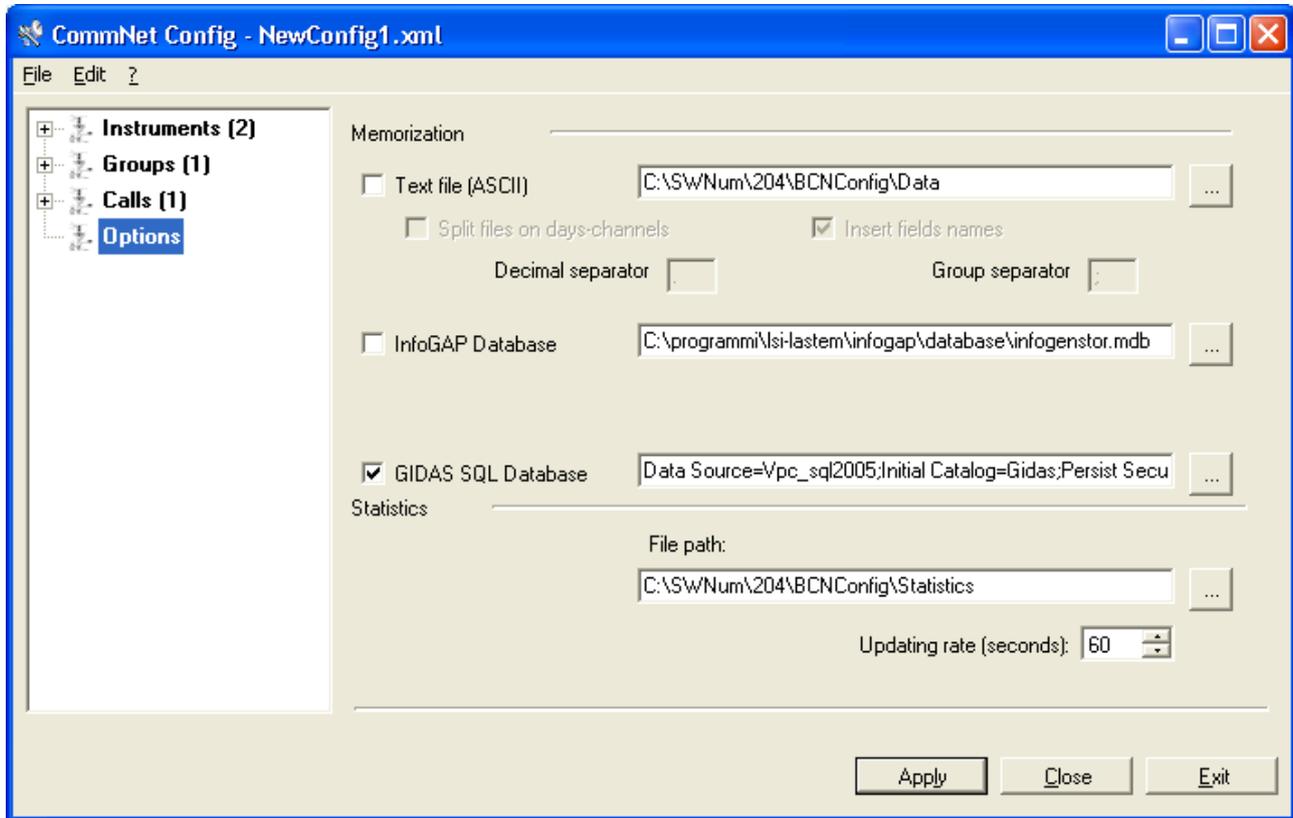


Choose the storage format of the data (elaborated values) specifying the file storage path. If the storage is in ASCII file, there is the possibility to choose if store the data on different files (one per day for each quantity) or in a single file (a file on a unique period for each quantity). Moreover it is possible to choose if store the data inserting or not the names of the data fields (ex. (Min) 23.7; (Ave) 25.4; (Max) 27.8).

If you want to show data with CommNet Display, or if CommNet is used together with the program InfoPanel, it is enough to transfer only the instantaneous data and store them into a *Text file (ASCII)*. For more information about the use of InfoPanel refer to the relating Manual.

If data have to be used together with the program InfoGAP, it is necessary to enable the storage into the *InfoGAP Database*. This option assumes that InfoGAP (and the relating database “*InfogenStore.mdb*”), is already installed on the PC, because CommNet cannot create a database autonomously. Moreover all the instruments must be already configured and enabled (licence “InfoGAP Advanced Level”). For more information about the use of InfoGAP refer to the relating help on line.

The option of memorization on Gidas SQL database allows the saving of the data on the database Gidas of Microsoft SQL Server 2005 installed locally or on a server; the data can be visualized with the program GidasViewer. For the installation of the database the manual of this program is seen.

To produce the connection string press the button  that will visualize the window of connection to the database Gidas.

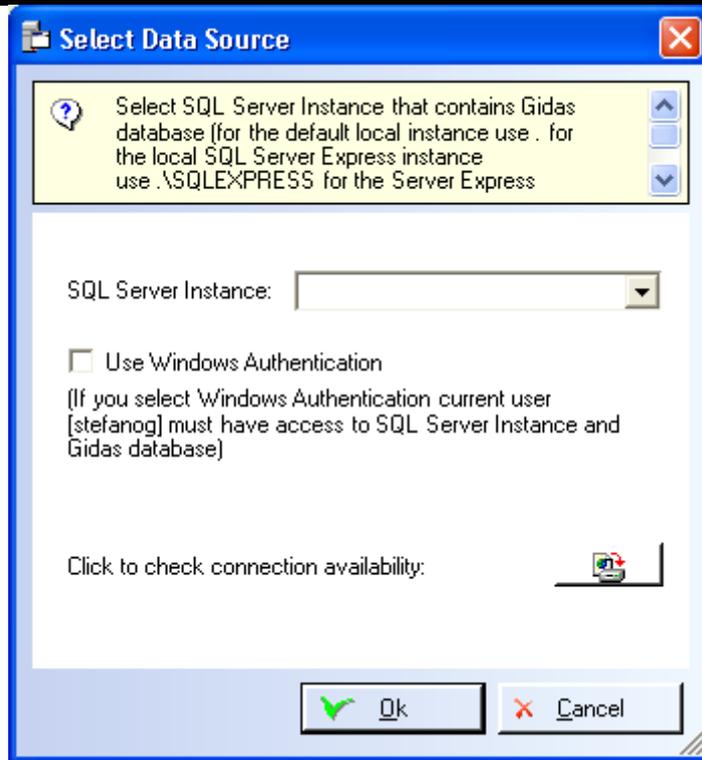

Insert the name of the SQL Server Instance that it contains the database Gidas and press the button < Ok >. Use the Windows Authentication Windows if the database has been installed in the local PC. If the database was installed on a server use the indications furnished by the database administrator.

Any change to the displayed parameters are saved only if the key *Apply* is pressed.


After configuring the instrument, possible groups of instruments, the calling modalities and the storage formats, the configuration is finished and is ready to be read by *CommNet*.

If *CommNet Config* was started directly by *CommNet*, it is necessary to reload the configuration by *CommNet*, choosing *Reload configuration* from the menu *File*, otherwise the new changes will be ignored until the next restart of the program.

5.5.1. Configuration for CommNet Display or InfoPanel

If you want to show data with *CommNet Display*, or if *CommNet* is used together with the program *InfoPanel*, it is enough to transfer only the instantaneous data and store them into a *Text File (ASCII)*.

The ASCII file can be stored locally or in a network folder. Choose a folder from the network if *InfoPanel* is installed on a different PC than *CommNet*.

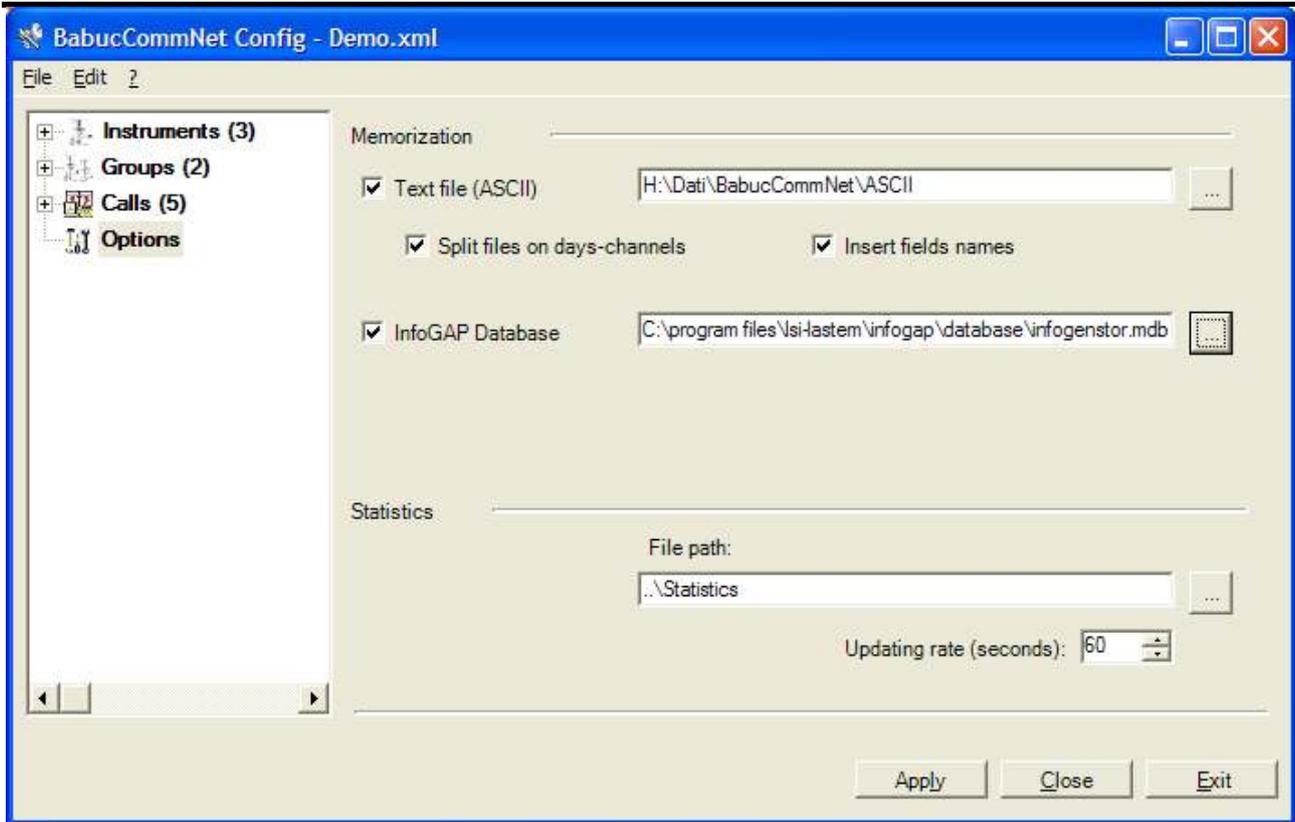

For the data reading by InfoPanel, it is necessary to configure a data source for each instrument to display. The parameters to be set are:

- *Type: ASCII file.*
- *Instrument Id:* the instrument serial number (ex. 7228).
- *Enable data reading:* enabled
- *Data source file path:* the name (path included) of the instrument file *Inst.txt* (for more information refer to chapter 6.5.2).



Setting example for the data reading from one instrument configured in CommNet.

5.5.2. Configuration for InfoGAP

If data have to be used with the program InfoGAP, it is necessary to enable the storage into the *InfoGAP Database*. This option assumes that InfoGAP (and the relative database “*InfogenStore.mdb*”), is already installed on the PC, because CommNET cannot autonomously create a database.

The database can be stored locally or in a network folder. After the first InfoGAP installation, it is created locally, unless the user chose differently, in the folder “*C:\Program Files\LSI-Lastem\InfoGAP\Database*”. To have it in a network folder it is necessary to copy it from the local folder and set the new path through the InfoGAP menu *Utilities*.

All data are stored into the InfoGAP database according to the instrument serial number they come from. To use the data from InfoGAP, it is necessary to have the program *Licence Keys* (licence “InfoGAP Advance Level”) for each instrument.

5.5.3. Configuration for Gidas

To use the database Gidas of SQL Server 2005, it is necessary to enable the storage in the *GIDAS SQL Database*. This option assumes that the database *Gidas* is attainable from the program CommNet that is not able to autonomously create the database.

To create the database *Gidas* is necessary to use the program GidasViewer.

ATTENTION:


The storage in the database Gidas, natural support for the instrument E_Log, supports only the following elaborations:

- 1Ist
- 10Ist
- 60Ist
- Duration
- Eolo2
- Eolo3
- Eolo4
- Events Min,MiAx,Delta, Pulse
- Elaborations with Min, Max, Ave, Stdev,Tot

6. CommNet: activate the data transfer

The *CommNet* working modalities are all in the configuration file previously configured through the program *CommNet Config* while the data stored is shown by *CommNet Display*.

CommNet, once started, shows itself as in the picture below:

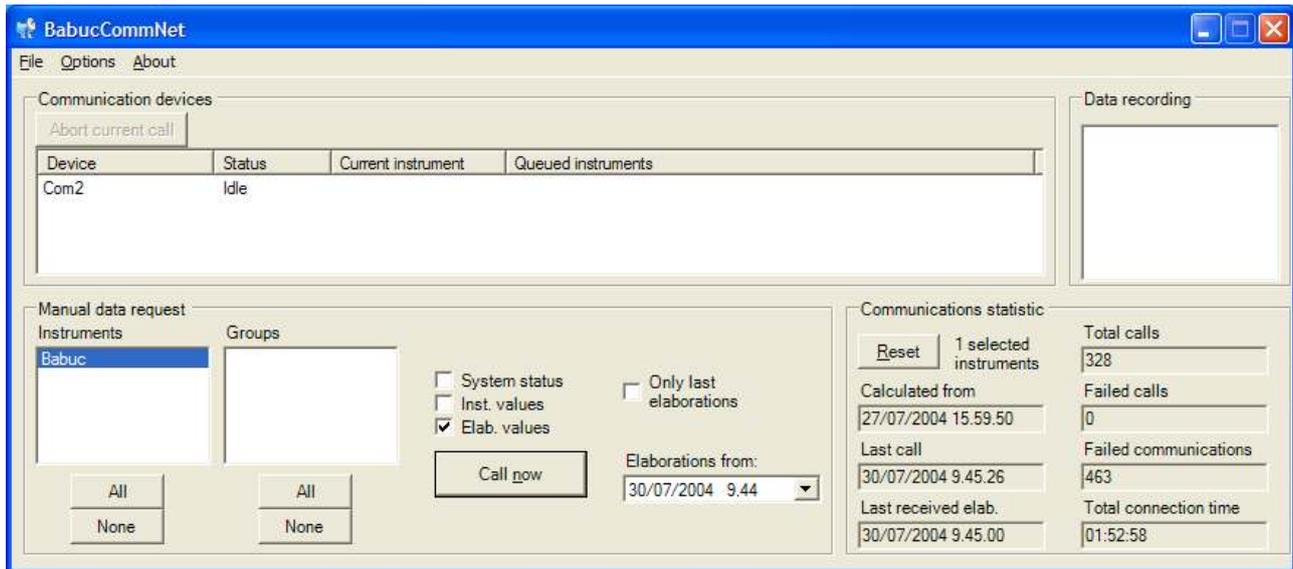

The information are grouped in four sections; they are:

- Manual data request
- Communication devices
- Data recording
- Communications statistic

6.1. Manual data request

Even if automatic calls are set, the user has the possibility, in every moment, to perform a manual call.

In details:


- *Instruments* list: it is the list of the instruments available for connection.
- *Groups* list: it is the list of the group of instruments available for connection.
- Keys *All/None*: it allows to quickly select or unselect all the instruments or groups of instruments.
- Box *System status*: automatically checked. During the connection the state of each selected instrument will be required. The information will be stored into the file "...\\Date\\<instrument name>\\Status.txt".
- Box *Instantaneous values*: if ticked during the connection the last read (or received) values of the probes connected to each selected instruments will be required. The information will be stored into the file "...\\Date\\<instrument name>\\Inst.txt".

- Box *Elaborated values*: if ticked during the connection the stored elaboration of each selected instrument will be required. The information will be stored into the file “..\Data\- Box *Only last elaborations*: if ticked during the connection the elaborations from the set date-time in *Elaborations from* will be required. This option is active only if the box *Elaborated values* is ticked.
- *Elaborations from*: date-time from which the elaborations will be required. This option is active only if the box *Only last elaborations* is ticked.
- Key *Call now*: if pressed it will be started the connection to the instruments or group of instruments selected.

6.2. Communication devices

This section includes a table where the information regarding all the communication: name and state of the communication device used for the connection, name of the instrument currently connected, list of the instruments waiting for the connection on a specific device. Each table line, corresponds to a different communication device. In details:

- *Device*: it is the name of the communication device used for the connection. It can be the name of a serial port (ex. “Com2”), or the name of the modem (ex. “Modem Standard 9600”).
- *State*: shows device state code (ex. “Idle” when it is in a waiting state or “CommRunning” when it is in a communication phase).
- *Current instrument*: it is the name of the instrument to which it is connecting.
- *Queued instruments*: it is the list of the instruments waiting.

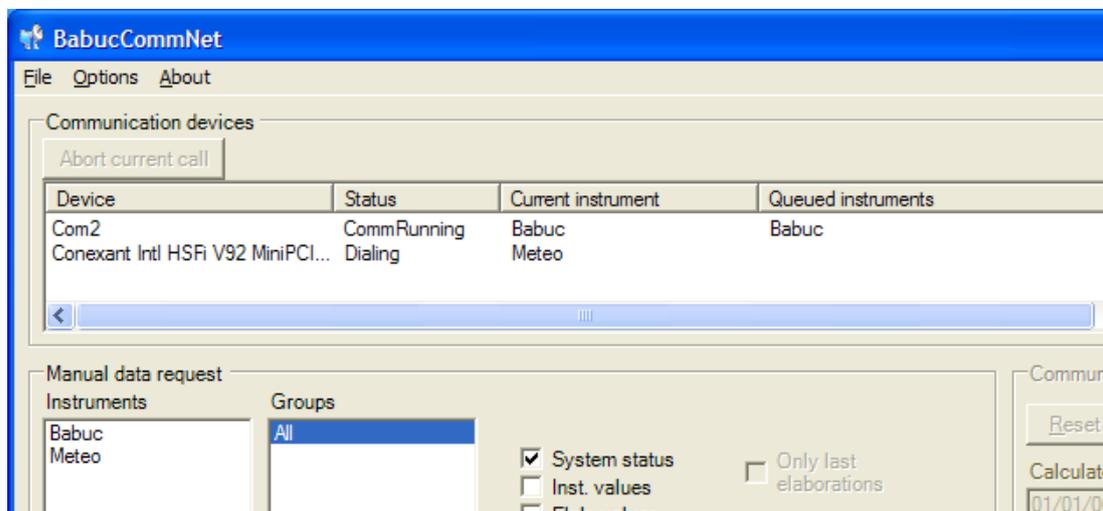

Initially the table is empty. The devices get added to the table after they are called from the program for the connection. Once the connection is terminated they are not removed but assume the state “Idle”.

6.3. Data recording

The list present in this section shows the name of the instruments storing the elaborated values on the ASCII file or Database. As soon as this phase finishes, the name of the instrument is removed. It is not advisable to close the program when this list contains one or more names, because it would produce the lost of the data received by the PC.

6.4. Communications statistic

In this section it is reported the statistic on the connections made. The information change according to the instruments selected in the section *Manual data request*. In details:

- *Key Reset*: it resets the statistic of the selected instruments.
- *Calculated from*: it is the date-time of the beginning of the calculation of the selected instrument statistic; if more instruments are selected it shows the less recent date;
- *Last call*: it is the date-time of the selected instrument; if more instruments are selected it shows the more recent date.
- *Last received elab.*: it is the date-time of the last received elaborated values from the selected instrument; if more instruments are selected it shows the more recent date.
- *Total calls*: it is the total number of calls performed by the selected instruments.
- *Failed calls*: it is the total number of failed calls from the selected instruments.
- *Failed communications*: it is the total number of the communications whose communication has not positive end, relatively to the selected instruments.
- *Total connection time*: it is the total time of connection of the selected instruments. It is not indicated the time necessary to the modem to get in connection with the remote modem.

Manual data request		Communications statistic	
Instruments	Groups	Reset	1 selected instruments
Babuc	All	Total calls	348
Meteo		Calculated from	27/07/2004 15.59.50
		Last call	30/07/2004 9.50.55
		Last received elab.	30/07/2004 9.45.00
		Failed calls	0
		Failed communications	463
		Total connection time	01:53:31

6.5. Interpretation of the files generated from CommNet

The files generated by *CommNet* are of three types:

- LOG file
- ASCII (TXT)
- Statistic files


6.5.1. LOG file

The log file is *EndUserLog.txt*, located in the folder: “.\Log”. It is generated in automatic way from the program, where it details, all the performed operations.

It can be read directly from *CommNet*, choosing *Open Events Recording* from the *File* menu.

Each line is made up of the following information:

- *Date*: in the format yyyy-mm-dd
- *Time*: in the format hh:mm:ss,ms
- *Type of event*: *INFO* (normal operations), *ERROR* (function errors found from the program), and *DEBUG* (settable only from LSI LASTEM)
- *Event description*.

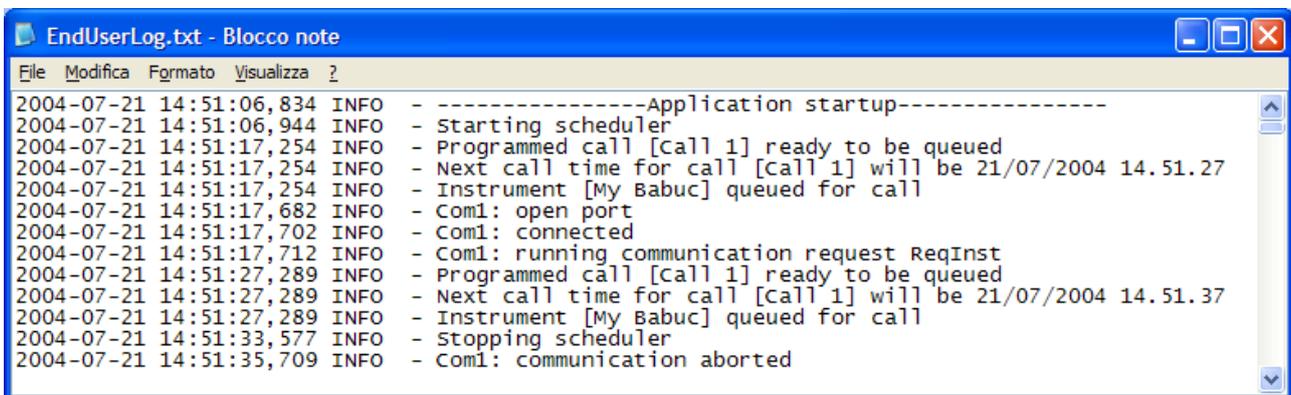

```

2004-07-21 14:51:06,834 INFO - -----Application startup-----
2004-07-21 14:51:06,944 INFO - Starting scheduler
2004-07-21 14:51:17,254 INFO - Programmed call [Call 1] ready to be queued
2004-07-21 14:51:17,254 INFO - Next call time for call [Call 1] will be 21/07/2004 14.51.27
2004-07-21 14:51:17,254 INFO - Instrument [My Babuc] queued for call
2004-07-21 14:51:17,682 INFO - Com1: open port
2004-07-21 14:51:17,702 INFO - Com1: connected
2004-07-21 14:51:17,712 INFO - Com1: running communication request ReqInst
2004-07-21 14:51:27,289 INFO - Programmed call [Call 1] ready to be queued
2004-07-21 14:51:27,289 INFO - Next call time for call [Call 1] will be 21/07/2004 14.51.37
2004-07-21 14:51:27,289 INFO - Instrument [My Babuc] queued for call
2004-07-21 14:51:33,577 INFO - Stopping scheduler
2004-07-21 14:51:35,709 INFO - Com1: communication aborted
  
```

After a prolonged period of time this file can assume, in function of the number of configured instruments and of the calls set frequency, quite big dimensions. If necessary, it is possible to delete it only after closing the communication program.

6.5.2. ASCII File (TXT)

The ASCII files generated by *CommNet* contains information about the instrument and, precisely: the state, the last instantaneous values, the elaborated values.


The first two are automatically generated by the program at each request of the kind *State of the instrument* and *Instantaneous values*. The third, instead, is automatically generated only if the user chose to store the elaborated values with the request *Elaborated values*.

All files are stored in the folder “.\Date<instrument name>”.

6.5.2.1. Instrument status

The information about the instrument status is contained in the file “Status.txt”. They are:

- *Last update*: date-time of the last update
- *Program version*: instrument version
- *Factory serial #*: instrument serial number (not changeable)
- *User’s serial #*: user’s instrument serial number (changeable)
- *Battery level*: battery charge level (in V)
- *Memory free/total*: available memory/total memory

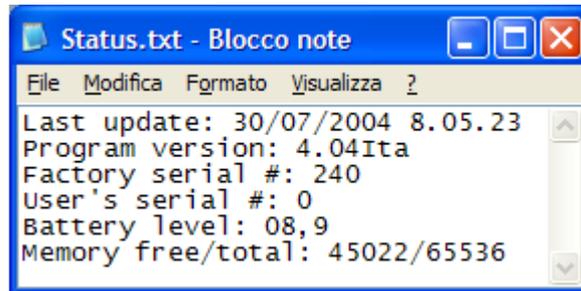


```
File Modifica Formato Visualizza ?
Last update: 30/07/2004 8.05.23
Program version: 4.04Ita
Factory serial #: 240
User's serial #: 0
Battery level: 08,9
Memory free/total: 45022/65536
```

6.5.2.2. Instantaneous values

The information with the last acquired values are contained in the file “Inst.txt”. They are:

- *UpdateTime*: date-time of the last updated data refer to
- *SerialNr*: instrument serial number
- *Ch<channel n. > <quantity name>*: where <channel n.> is the channel number the data come from and <quantity name> is the datum quantity name. There are as much lines as the number of channels.

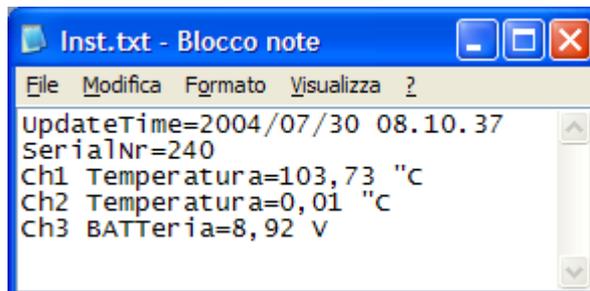

```
File Modifica Formato Visualizza ?
UpdateTime=2004/07/30 08.10.37
SerialNr=240
Ch1 Temperatura=103,73 "C
Ch2 Temperatura=0,01 "C
Ch3 BATTERia=8,92 V
```

This file is the one that supplies the data form the program InfoPanel.

6.5.2.3. Elaborated values

The elaborated values are stored in one or more files depending on the option *Store per day-channel*. If this is enabled they are stored on different files according to the day and channel. In this case the files are named “DyymmddCxxx.elab.txt” (yy is the year, mm is the month, dd is the day, xxx is the quantity channel number).

```

D020205C001.elab.txt - Blocco note
File Modifica Formato Visualizza ?
C1;E48;B1;T05/02/2002 7.15.30;v100;(Ist_1)103.77;(Ist_2)103.77;(Ist_59)-999,999.00;(Ist_60)-999,999.00
C1;E48;B1;T05/02/2002 7.15.30;v100;(Ist_1)103.77;(Ist_2)103.77;(Ist_59)-999,999.00;(Ist_60)-999,999.00
C1;E48;B1;T05/02/2002 7.15.30;v100;(Ist_1)103.77;(Ist_2)103.77;(Ist_59)-999,999.00;(Ist_60)-999,999.00
C1;E48;B1;T05/02/2002 7.15.30;v100;(Ist_1)103.77;(Ist_2)103.77;(Ist_59)-999,999.00;(Ist_60)-999,999.00
    
```

Example of “elaborated” values of Babuc/A/M on 05/02/02 of the channel 1 (with field description).

```

D020205C001.elab.txt - Blocco note
File Modifica Formato Visualizza ?
C2;E48;B1;T05/02/2002 7.15.30;v100;(Ist_1)0.00;(Ist_2)0.00;(Ist_59)-999,999.00;(Ist_60)-999,999.00
C2;E48;B1;T05/02/2002 7.15.30;v100;(Ist_1)0.00;(Ist_2)0.00;(Ist_59)-999,999.00;(Ist_60)-999,999.00
C2;E48;B1;T05/02/2002 7.15.30;v100;(Ist_1)0.00;(Ist_2)0.00;(Ist_59)-999,999.00;(Ist_60)-999,999.00
C2;E48;B1;T05/02/2002 7.15.30;v100;(Ist_1)0.00;(Ist_2)0.00;(Ist_59)-999,999.00;(Ist_60)-999,999.00
    
```

Example of “elaborated” values of Babuc/A/M on 05/02/02 of the channel 2 (with field description).

```

D040916C011.elab.txt - Blocco note
File Modifica Formato Visualizza ?
C11;E24;B1;T16/09/2004 10.10.00;v100;(Ave)99.8
C11;E24;B1;T16/09/2004 10.20.00;v100;(Ave)100.0
C11;E24;B1;T16/09/2004 10.30.00;v100;(Ave)100.0
C11;E24;B1;T16/09/2004 10.40.00;v100;(Ave)100.0
C11;E24;B1;T16/09/2004 10.50.00;v100;(Ave)100.0
    
```

Example of elaborated values of Babuc ABC on 16/09/04 of the channel 11 (with field description).

```

D040916C004.elab.txt - Blocco note
File Modifica Formato Visualizza ?
C4;E6;B1;T16/09/2004 10.10.00;v100;(Min)0.08;(Ave)0.17;(Max)1.03;(Stdev)0.20
C4;E6;B1;T16/09/2004 10.20.00;v100;(Min)0.08;(Ave)0.11;(Max)0.13;(Stdev)0.02
C4;E6;B1;T16/09/2004 10.30.00;v100;(Min)0.08;(Ave)0.11;(Max)0.13;(Stdev)0.02
C4;E6;B1;T16/09/2004 10.40.00;v100;(Min)0.07;(Ave)0.11;(Max)0.13;(Stdev)0.02
C4;E6;B1;T16/09/2004 10.50.00;v100;(Min)0.08;(Ave)0.11;(Max)0.13;(Stdev)0.02
    
```


Example of elaborated values of Babuc ABC on 16/09/04 of the channel 4 (with field description).

If the option *Store per day-channel* is enabled the elaborated values will be all stored in the file “elab.txt”.

```

Elab.txt - Blocco note
File Modifica Formato Visualizza ?
C1;E48;B1;T07/02/2002 5.24.30;v100;(Ist_1)103.77;(Ist_2)103.77;(Ist_3)-327.68;(Ist_4)-999,999,999.00;(Ist_52)-999,999.00;(Ist_53)-999,999.00;(Ist_54)-999,999.00;(Ist_55)-999,999.00;(Ist_56)-999,999.00
C2;E48;B1;T07/02/2002 5.24.30;v100;(Ist_1)0.01;(Ist_2)0.01;(Ist_3)-327.68;(Ist_4)-999,999.00;(Ist_52)-999,999.00;(Ist_53)-999,999.00;(Ist_54)-999,999.00;(Ist_55)-999,999.00;(Ist_56)-999,999.00
C1;E48;B1;T07/02/2002 5.24.30;v100;(Ist_1)103.77;(Ist_2)103.77;(Ist_3)-327.68;(Ist_4)-999,999,999.00;(Ist_52)-999,999.00;(Ist_53)-999,999.00;(Ist_54)-999,999.00;(Ist_55)-999,999.00;(Ist_56)-999,999.00
C2;E48;B1;T07/02/2002 5.24.30;v100;(Ist_1)0.01;(Ist_2)0.01;(Ist_3)-327.68;(Ist_4)-999,999.00;(Ist_52)-999,999.00;(Ist_53)-999,999.00;(Ist_54)-999,999.00;(Ist_55)-999,999.00;(Ist_56)-999,999.00
    
```

Example of elaborated values of Babuc/A/M (all channels, with field description).

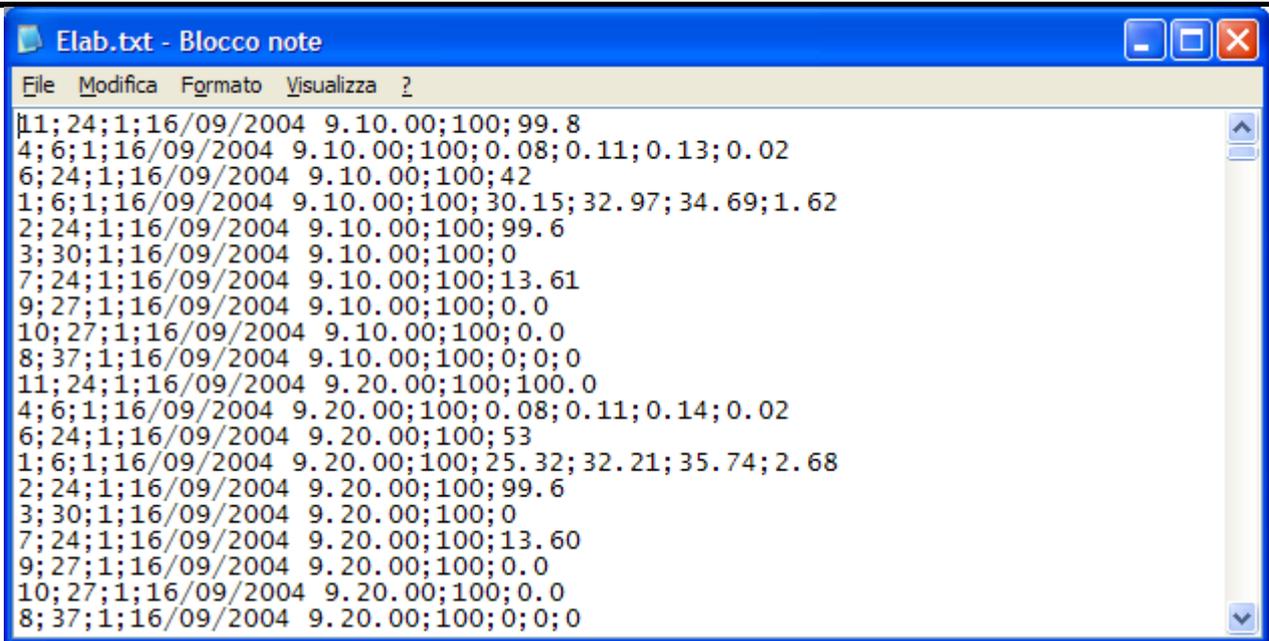


Example of elaborated values of Babuca/M (all channels, without field description).

6.5.3. Statistics files

There is a statistics file for each instrument. Its name is *<name instrument>.xml* and it is located in the folder “.\Statistics”. It is generated at the first call to the instrument and updated with the following calls.

In the file all the information about the Statistics of the communications of the single instrument are stored. The same information are displayed by *CommNet* in the section *Communication Statistics*.

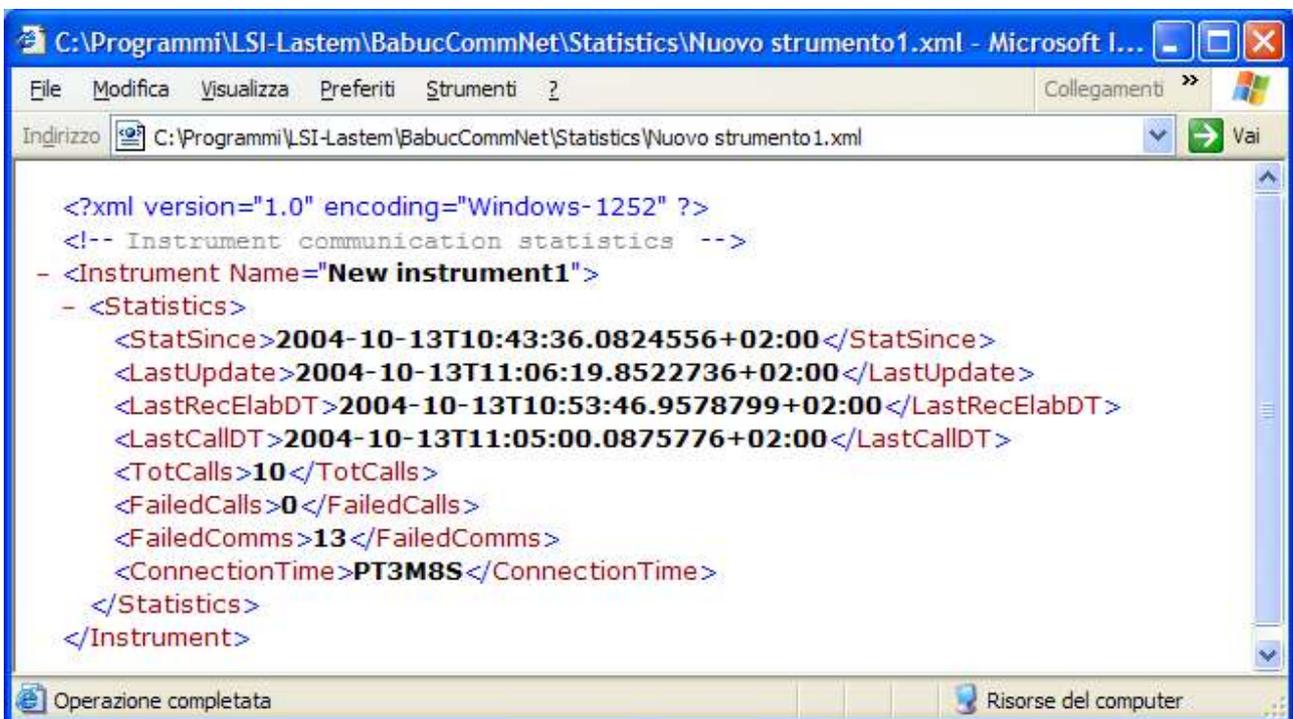


7. CommNet Display: show data

CommNet Display is a program to show the instantaneous values stored by CommNet.

The program can be started from the Start menu of Windows or directly by CommNet choosing *Show Data* from the menu *File*.

Because *CommNet Display* shows the stations data, it is necessary have performed an instantaneous call to every stations, otherwise the windows with the relative values won’t come displayed.

At the first run it is necessary to specify the path where the file/s ASCII is/are stored (default: C:\Documents and Settings\All Users\Application data\LSI-Lastem\CommNet\ASCIIData).

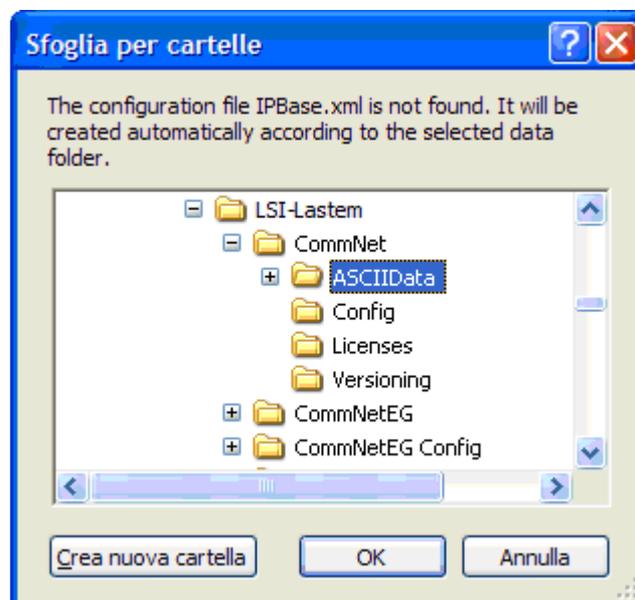

Then the program will show one window for each instrument stored. The window will contain a table with the following information:

- *C.*: number of channel of the quantity.
- *Quantity*: name of the quantity.
- *UM*: measure unit of the quantity.
- *Date-time*: it is the date-time of the last update to which data refer to.
- *Date-time*: it is the date-time of the penultimate update to which data refer to.



If *CommNet Display* has the updating rate lower than the calling rate programmed in CommNet, the two columns with the instantaneous values could be identical.

All the settings are saved in the configuration file *IPBase.xml*.

Every time the program starts, it checks if the information of this file is the same of those stored in the file/s ASCII.

In case of new instruments or channels respect to the file *IPBase.xml*, they will be automatically added to the configuration file.

In case of different instruments or channels, they will substitute those existing in the configuration file. In this case, the customized information (i.e. the name of the quantity, the limits of the alarm, and so on for the channel and the name of the instrument, the channels order, and so on for the instrument) will be lost.

In case of missing instruments, they will not show yet while in case of missing channels, they will be automatically deleted.

To delete an obsolete instrument from the visualization, it is necessary to access to the configuration and uncheck the check box *Visualize* of the relative instrument. To delete it also from the configuration, it is necessary to delete the folder corresponding to the original name of the instrument, in the path of memorization of the ASCII file/s. For further information refer to the chapter 7.1.

7.1. Customizing the visualization

The visualization can be customized as follow:

- To visualize only the desired instruments and the channels;
- To visualize the instrument with the desired name;
- To visualize the channels (quantities) with the desired name and in the desired order;
- To set the alarm thresholds of the channels (quantities);
- To set the colour, the size and the type of the character of the text;
- To set the size and the position of all windows.


To change the current visualization choose *Configure...* from the menu *File*.

7.1.1. Instrument visualization

In the section *Original information* are shown the information acquired by the CommNet program and stored in the file “Status.txt”. They cannot be modified.

In the section *Displayed information*, instead, the parameters that can be changed are shown. They are:

- *Visualize*: enable or not the instrument to be displayed.
- *Name*: it is the name of the instrument to display in the instrument window.
- *Channels order*: it is the order in which display the channels (the quantities) in the table. To move a channel, select it and then press the button *Move up* or *Move down*.

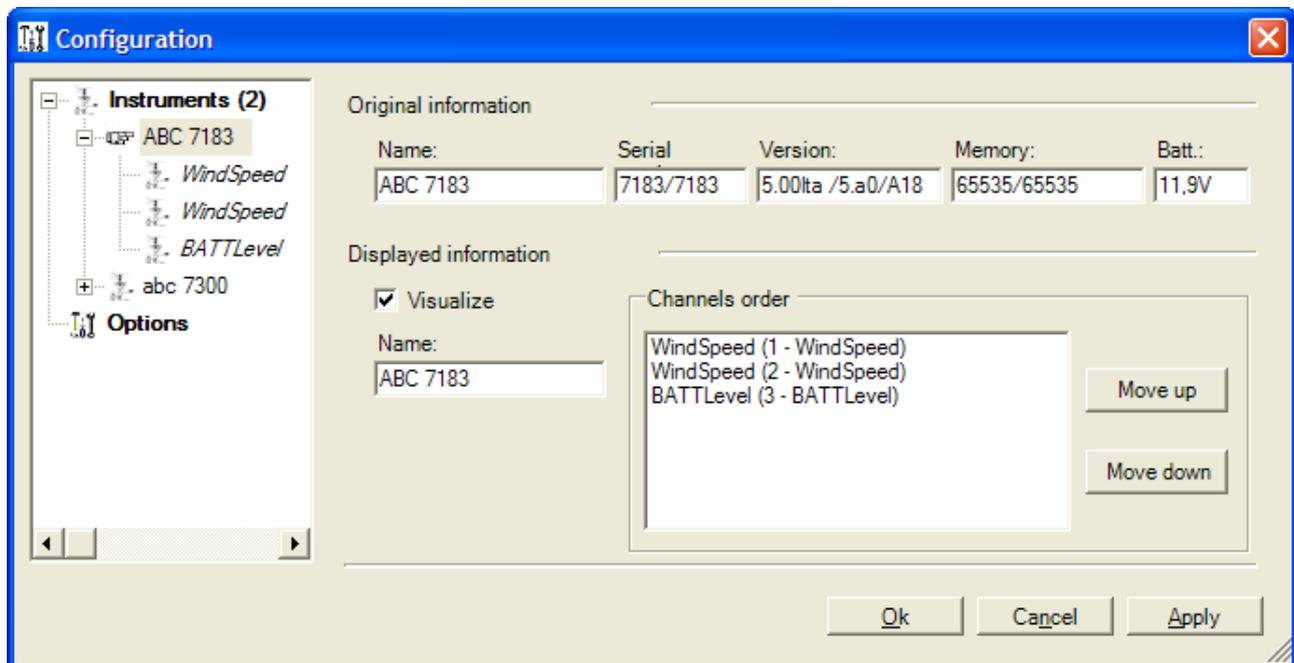

To save the changes, press *Ok* to exit from the configuration, otherwise press *Apply*.


7.1.2. Channel visualization

The channel is the number of the channel associated to the quantity.

In the section *Original information* are shown the information acquired by the CommNet program and stored in the file “Inst.txt”. They cannot be modified.

In the section *Displayed information*, instead, are shown the parameters that can be changed. They are:

- *Visualize*: enabled or not the channel to be displayed.
- *Name*: it is the name of the channel to display in the table of the instrument window.
- *Measure unit*: it is the measure unit of the channel to display in the table of the instrument window.
- *Alarm*: it specifies the type of alarm associated to the channel; if the alarm is enabled, different from “None”, it is necessary to set the lower and the upper limits. The alarms of the channels are active only if it is checked “Active alarms” in the Options.

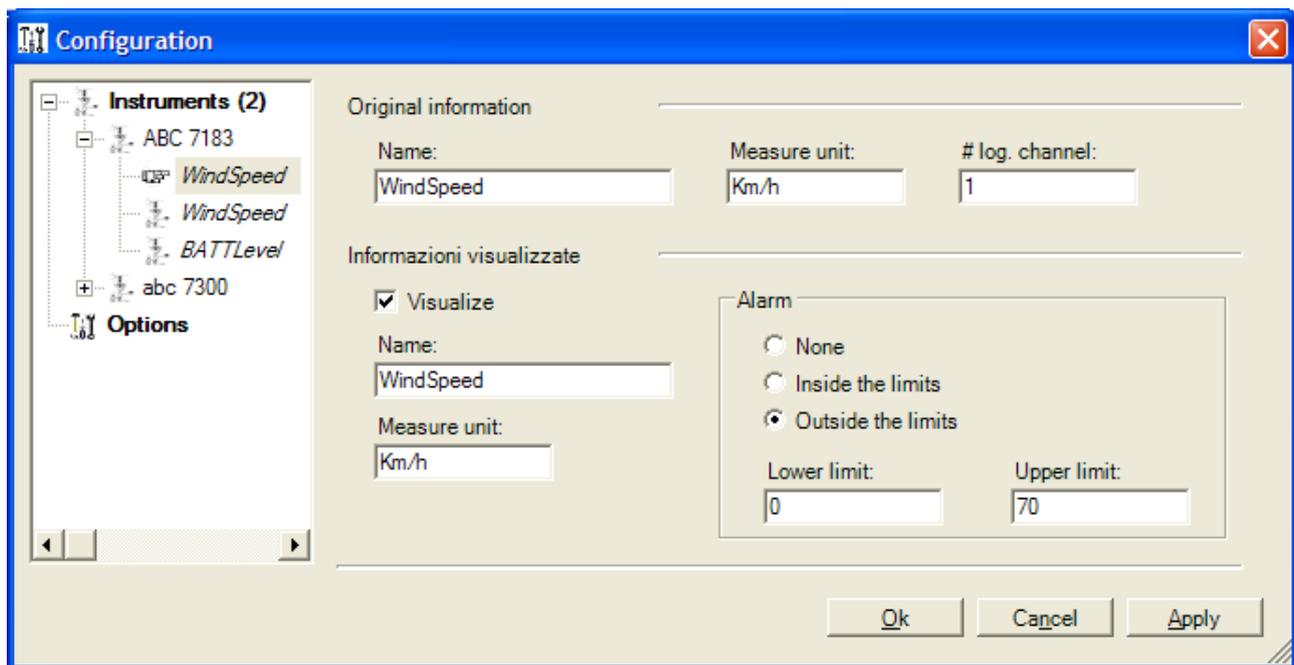


To save the changes, press *Ok* to exit from the configuration, otherwise press *Apply*.

7.1.3. Options

In the *Options* are shown all the general settings of the program. They are:

- *Data path*: it is the path where the ASCII file/s is/are stored (default: C:\ Documents and Settings\All Users\Application data\LSI-Lastem\CommNet\ASCIIData).
- *Update rate*: it specifies how many seconds the program read the ASCII file/s.
- *Color of data in case of error*: it is the color of the “Err” text that indicate data in error (default: red).
- *Color and font of the text in the tables*: it is the color, the size and the type of the character of the text in the instruments table (default: color: black, character: Arial, size: 8, style: normal).
- *Active alarms*: if it is checked, the program considers the alarms settled for each channels.
- *Colour of data in case of alarm*: it is the colour of the text of the data if the channel is in alarm.

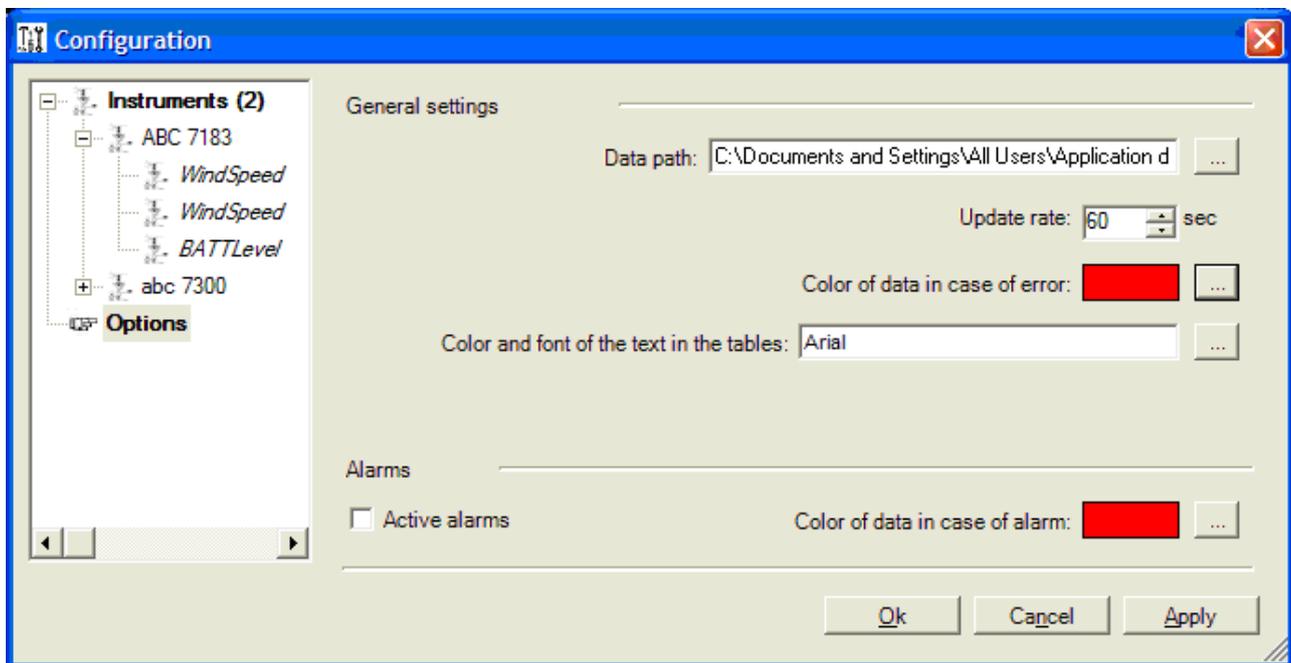

To save the changes, press *Ok* to exit from the configuration, otherwise press *Apply*.



Thank you for reading this data sheet.

For pricing or for further information, please contact us at our UK Office, using the details below.



UK Office

Keison Products,

P.O. Box 2124, Chelmsford, Essex, CM1 3UP, England.

Tel: +44 (0)330 088 0560

Fax: +44 (0)1245 808399

Email: sales@keison.co.uk

Please note - Product designs and specifications are subject to change without notice. The user is responsible for determining the suitability of this product.